

HUDDLECAMHD USB2Air

Addendum for Setup if no Connection on first use of “DEVICE” Dongle

6/12/2017

Please download and install the UWB Connection manager for Windows from the following link

[UWB Connection Manager Download Link http://bit.ly/2ri3zlt](http://bit.ly/2ri3zlt)

Once UWB Connection Manager is fully installed

Connect the USB dongle labeled “HOST” to your Windows PC

Connect the “DEVICE” dongle one side of the two (2) port USB hub

Plug the power supply into the side of the two (2) port USB hub

Plug in your USB device to the other side of the powered USB hub

Run the UWB Connection Manager program from your Windows Start Menu

The software will see the “DEVICE” side after approximately 20 ~ 60 seconds

Click the button that says “Connect” on your UWB connection Manager software

You should now be connected to the USB Device connected to the “DEVICE” dongle

Enjoy using the USB2Air!

 
If you don't see a “Connect” button on your UWB Connection Manager software, please proceed to the steps below.

Typically, if the USB2Air is not allowing connections, it is the result of an improper driver assignment which can be easily fixed with the steps below.

Open Windows “Device Manager” in the “Devices by type” view

Scroll down and open the section titled “Universal Serial Bus controllers”

Within this section locate a device currently titled “Cypress...” as highlighted below

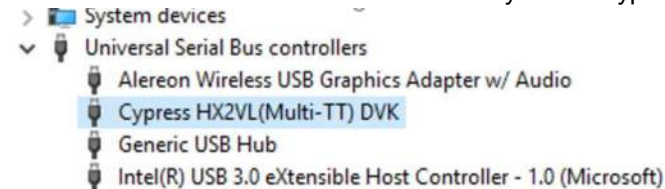

Right click on the “Cypress...” device and select “Update Driver Software”

Select the “Browse My Computer” option for the driver selection

 
Choose “Let me pick from a list of device drivers already installed on my computer”

There are two (2) options one for the current driver and the other is “Generic USB Hub”



Once “Generic USB Hub” is highlighted click the “Next” button to install the driver

Now in “Device Manager” the “Generic USB Hub” has replaced the “Cypress...” device

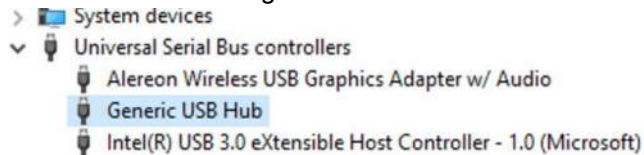

The HC-USB2-AIR should now be fully operational using the UWB Connection Manager to initiate a connection as discussed in the “Run the UWB Connection Manager program.” section above.