



PRESETS FOR 3X, 3XW, 10X, 20X AND 30X

V1.0

Setting a preset for the HuddleCamHD

Setting a Preset:

1. Start by making sure the camera is powered and the USB connection has been established
2. Navigate the camera to the position you wish to create a preset for
3. Click on the preset number you wish to assign [1-9] to the current location
4. Click on the “Set” button

Calling a Preset:

1. Start by making sure the camera is powered and the USB connection has been established
2. Click on the preset number you wish to call [1-9]
3. Click on the “Call” button
4. The camera will move to the requested preset location

Clearing a Preset:

Please note that you can ALWAYS set a preset over an existing preset; however if you truly wish to clear a preset button follow the steps below

1. Start by making sure the camera is powered and the USB connection has been established
2. Click on the preset number you wish to clear [1-9]
3. Click on the “Clear” button

