



152 Robbins Rd, Downingtown, PA, 19335, USA - HuddleCamHD.com | 1 800 - 486-5276

HuddleCamHD Pro IP

NDI® | HX EPTZ CAMERA

INSTALLATION & OPERATION MANUAL





152 Robbins Rd, Downingtown, PA, 19335, USA - HuddleCamHD.com | 1 800 - 486-5276

Precautions.....

Safety Tips.....

- Please read this manual carefully before using the camera.
- Avoid damage from stress, violent vibration or liquid intrusion during transportation, storage or installation.
- Take care of the camera during installation to prevent damage to the camera case, ports, or lens.
- Do not apply excessive voltage. (Use only the specified voltage.) Otherwise, you may experience electrical shock.
- Keep the camera away from strong electromagnetic sources.
- Do not aim the camera at bright light sources (e.g. bright lights, the sun, etc.) for extended periods of time.
- Do not clean the camera with any active chemicals or corrosive detergents.
- Do not disassemble the camera or any of the camera's components. If problems arise, please contact your authorized dealer.
- Contact your authorized dealer for repair.

In the Box.....


Supplied Equipment.....

- HC-EPTZ-NDI Camera (1)
- 12V Power Supply (1)
- IR Remote Controller (1)
- User Manual (1)



Physical Description.....

1. Front View.....

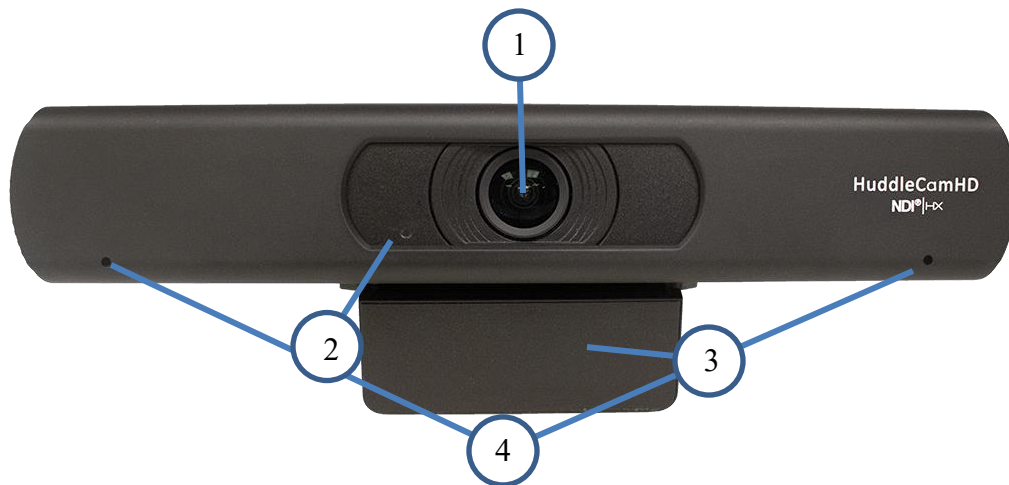

1. **Lens**
108° Field of View lens
2. **Power LED**
Blue LED lights when unit is powered and on.
3. **Mounting Base**
Mounting base for camera. 1/4-20 mounting screw.
4. **Microphone Array**
Beamforming Microphone Array



2. Rear View.....



5. RJ-45 Connection

For connection to LAN and for PoE powering

6. USB 2.0 Connection

For future use

7. DC12V Power Connection

For powering on camera



152 Robbins Rd, Downingtown, PA, 19335, USA - HuddleCamHD.com | 1 800 - 486-5276

NDI® | HX Connection Guide.....

This connection guide will explain the method to connect your NDI® | HX camera to your PC for use with software applications.

Three easy steps:

1. Install the latest NDI® Tools
2. Connect your camera to the NDI® Virtual Input
3. Select the NDI® Virtual Input in your software of choice

Step 1:

- Download and install the latest NDI® Tools
<https://www.newtek.com/ndihx/products/>

Please note this will install NewTek® NDI® Studio Monitor & NDI® Virtual Input

Step 2:

- Open the NDI® Virtual Input
- Right-click the NDI® Virtual Input and select your camera of choice

Step 3:

- Open your software of choice
- Go to video settings and select video source as “NewTek NDI® Video”

*NewTek®, NDI®, & NDI® | HX are all registered trademarks of VZRT Group®.
Please note that your license key is non-transferrable.*



152 Robbins Rd, Downingtown, PA, 19335, USA - HuddleCamHD.com | 1 800 - 486-5276

OSD Menu.....

On Screen Display Menu

Use the OSD menu to access and change the camera's settings.

Note: Electronic P / T / Z functionality is disabled when the OSD menu is displayed.

The camera OSD Menu offers the following settings options:

- **Exposure**

- **Full Auto**

- **ExpCompMode** **Off** On / Off

- **Exp Comp** **0** -7 ~ +7

- Note: Available when ExpCompMode is "On"*

- **Gain Limit** **6** 0 ~ 15

- **Meter** **Average** Bottom / Average / Top / Center

- **Backlight** **Off** On / Off

- **DRC Strength** **5** 0 ~ 8

- **Anti-Flicker** **60Hz** Off / 50Hz / 60Hz

- **Shutter Priority**

- **Shutter** **1/60** 1/30s, 1/60s, 1/90s, 1/100s, 1/125s, 1/200s,
1/250s, 1/350s, 1/500s, 1/725s, 1/1000s,
1/1500s, 1/2000s, 1/3000s, 1/4000s,
1/6000s, & 1/10000s

- **Meter** **Average** Bottom / Average / Top / Center

- **DRC Strength** **5** 0 ~ 8

- **Bright**

- **Bright** **7** 0 ~ 17

- **Gain Limit** **6** 0 ~ 15

- **Meter** **Average** Bottom / Average / Top / Center

- **DRC Strength** **5** 0 ~ 8

- **Anti-Flicker** **60Hz** Off / 50Hz / 60Hz



152 Robbins Rd, Downingtown, PA, 19335, USA - HuddleCamHD.com | 1 800 - 486-5276

- **Manual**
 - **Shutter** **1/60** 1/30s, 1/60s, 1/90s, 1/100s, 1/125s, 1/200s, 1/250s, 1/350s, 1/500s, 1/725s, 1/1000s, 1/1500s, 1/2000s, 1/3000s, 1/4000s, 1/6000s, & 1/10000s
 - **Gain** **2** 0 ~ 15
 - **DRC Strength** **5** 0 ~ 8
- **Color**
 - **Auto**
 - **AWB Sens** **High** Low / Middle / High
 - **RG Tuning** **0** -10 ~ +10
 - **BG Tuning** **0** -10 ~ +10
 - **Saturation** **100%** 60% ~ 200%
 - **Hue** **7** 0 ~ 14
 - **Indoor**
 - **Saturation** **100%** 60% ~ 200%
 - **Hue** **7** 0 ~ 14
 - **Outdoor**
 - **Saturation** **100%** 60% ~ 200%
 - **Hue** **7** 0 ~ 14
 - **OnePush**
 - **AWB Sens** **High** High / Low / Normal
 - **RG Tuning** **0** -10 ~ +10
 - **BG Tuning** **0** -10 ~ +10
 - **Saturation** **100%** 60% ~ 200%
 - **Hue** **7** 0 ~ 14
 - **Manual**
 - **RG Tuning** **226** 0 ~ 255
 - **BG Tuning** **188** 0 ~ 255



152 Robbins Rd, Downingtown, PA, 19335, USA - HuddleCamHD.com | 1 800 - 486-5276

- **Saturation** **100%** 60% ~ 200%
- **Hue** **7** 0 ~ 14
- **Image**
 - **Luminance** **7** 0 ~ 14
 - **Contrast** **7** 0 ~ 14
 - **Sharpness** **4** Auto / 0 ~ 15
 - **Flip-H** **Off** Off / On
 - **Flip-V** **Off** Off / On
 - **Gamma** **EXT** Default / 0.45 / 0.5 / 0.56 / 0.63
 - **Style** **Default** Clarity / Bright / PC / Clarity (LED) / Norm
 - **LDC** **10** Off / -10 ~ +10
- **Noise Reduction**
 - **2D-NR** Close / Auto / 1 ~ 5
 - **3D-NR** Close / 1 ~ 8
- **Setting**
 - **Language** **English** English, Chinese, Russian, Italian, German, French, Spanish
 - **Protocol** **VISCA** VISCA, PELCO-P, PELCO-D
 - **Visca Addr** **1** 1 – 7 (VISCA), 0 – 254 (PELCO-P), 0 – 31 (PELCO-D)
 - **EPTZ** **On** On / Off
 - **Zoom Limit** **1x-3x** 1x-3x / 1x-4x / 1x-8x / 2x-4x / 2x-8x / 3x-8x
 - **Audio In** **MicIn 16K** MicIn 16K
 - **AutoFraming** **Off** On / Off
- **Information** Displays current camera settings
- **Restore Default** Restore camera *default settings*

IR Remote Controller.....

Note: IR Remote will not work on other HuddleCamHD cameras

1. **Standby Button:**
Press this button to enter standby mode. Press it again to enter normal mode.

NOTE: Power consumption in standby mode is approximately half of the normal mode.

2. **Position Buttons:**
To set preset or call preset

3. *** (asterisk) Button:**
For multiple functions.

4. **Preset Button:**
Allows for setting a preset
NOTE: [PRESET] + Numeric button (0-9) to set

5. **Home Buttons:**
Press the Home button to send the camera back to front

6. **Return Button:**
Press the button to back previous menu

7. **Zoom Buttons:**
Zoom+: Zoom In (Slow and fast speed)
Zoom-: Zoom Out (Slow and fast speed)

8. **L/R Set Button:**
Set the left & right direction of the remote control.
(not available on this model)

9. **Focus Buttons:**
Used for focus adjustment
Press AUTO to adjust the focus on the center of the object automatically. To adjust the focus manually, press the MANUAL button, and adjust it with FAR and NEAR.

10. **Camera Address Select Buttons:**
Camera the button corresponding to the camera which you want to operate with the remote controller

11. **# Button:**
For multiple functions

12. **Multiple function Buttons:**
Function 1. Set camera IR address
Press 3 keys contiguously can set camera IR address as follow:

[*] + [#] + [F1]: IR Address 1

[*] + [#] + [F2]: IR Address 2

[*] + [#] + [F3]: IR Address 3

[*] + [#] + [F4]: IR Address 4

Function 2. Image freezing function


Press [F4] to start the freeze function. The word "Freeze" displays on the upper left corner. After five seconds, the display disappears automatically (though the freeze feature continues). To cancel the freeze, press the [F4] key the word "Unfreeze" displays on the upper left corner. After five seconds, the display disappears automatically.

13. **Reset Button:**
Clear preset: Erase a preset position [RESET] + numeric button (0-9), or: [*] + [#] + [RESET]: Erase all presets

14. **Pan/Tilt Control Buttons:**
Allows for electronic Pan/Tilt control

15. **Menu Buttons:**
Menu Button: Press this button to enter or exit the OSD menu.

16. **Backlight Button:**
Backlight button: Press this button to enable the backlight compensation. Press it again to disable the backlight compensation.

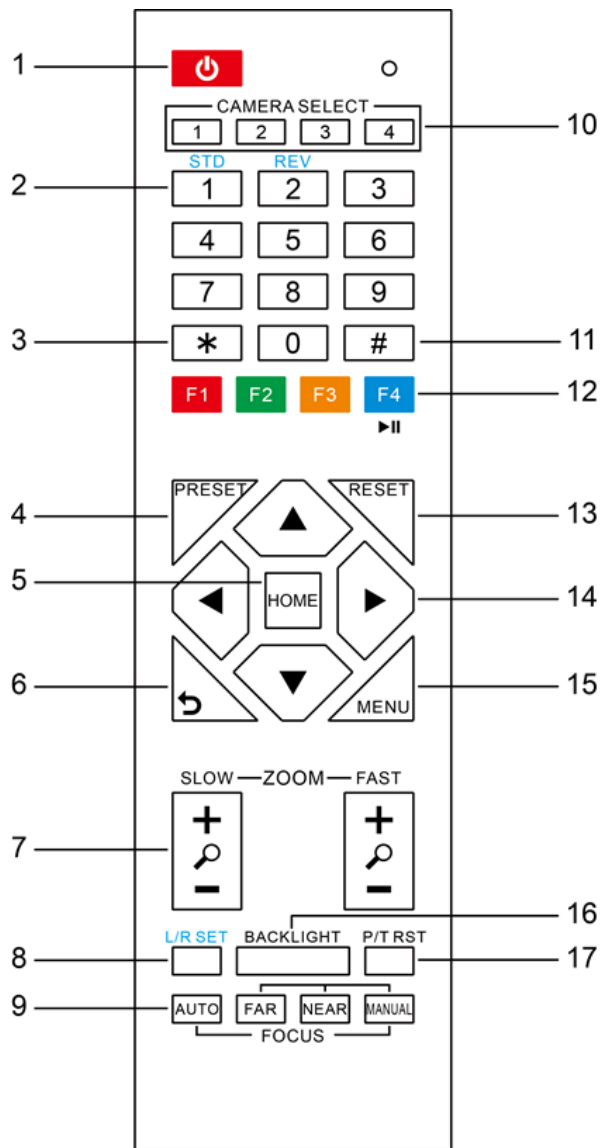



152 Robbins Rd, Downingtown, PA, 19335, USA - HuddleCamHD.com | 1 800 - 486-5276

NOTE: Only available in manual exposure mode.

NOTE: If there is a light begin the subject, the subject will appear dark. In this case, press the backlight ON/OFF button. To cancel the function, press the backlight ON/OFF button

17. **P/T RST Button:**

Press this button to self-calibrate pan & tilt once again.

NOTE: not available on this model

• **Shortcuts:**

[*] + [#] + [1]: Display OSD menu in English

[*] + [#] + [3]: Display OSD menu in Chinese

[*] + [#] + [4]: Show IP Address

[*] + [#] + [6]: Quickly restore the default settings

[*] + [#] + [8]: Show the camera version

[*] + [#] + [9]: Quickly set mount mode (flip/normal)

[*] + [#] + [MANUAL]: Resets IP information

[#] + [*] + [4]: Toggle between DHCP & Static IP addressing

[#] + [*] + [#] + [1]: Set IP address to 192.168.100.81

[#] + [*] + [#] + [2]: Set IP address to 192.168.100.82

[#] + [*] + [#] + [3]: Set IP address to 192.168.100.83

[#] + [*] + [#] + [4]: Set IP address to 192.168.100.84

[#] + [*] + [#] + [5]: Set IP address to 192.168.100.85

[#] + [*] + [#] + [6]: Set IP address to 192.168.100.86

[#] + [*] + [#] + [7]: Set IP address to 192.168.100.87

[#] + [*] + [#] + [8]: Set IP address to 192.168.100.88

[#] + [*] + [#] + [9]: Set IP address to 192.168.100.89

[#] + [*] + [#] + [0]: Set IP address to 192.168.100.80

Care Of The Unit.....

Remove dust or dirt on the surface of the lens with a blower (commercially available).

Installation Instructions.....


Monitor Installation.....

When mounting the HuddleCamHD camera on a monitor, ensure that the mount screw is fastened tightly to the camera. Use the top mount to rest the camera on a monitor. Position the bottom mount on the back of the monitor to secure the camera in position. You can rotate the camera lens as necessary.

Tripod Installation.....

When using the HuddleCamHD camera with a tripod, screw the tripod to the bottom of the camera. The tripod screw must fit below specifications:

The tripod screw must fit shown specifications:

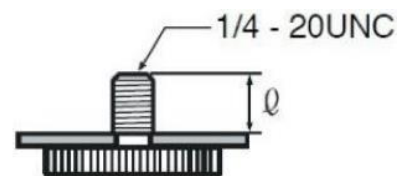

$$Q = 5 - 7 \text{ mm}$$

Network Connection.....

1. Operating Environment


- OS: Windows 7/8.1/10 & Mac OS
- Network Protocol: TCP/IP
- Min Requirements: CPU(P4/2+GHz)/128M RAM/40Gb HD/ support for scaled graphics card, support for DirectX 8.0 or better.

2. Equipment Installation


- 1) Connect camera to your network via a CAT5/6 patch cable or directly to your PC. (Note: external power is required when connecting directly to PC)
- 2) Turn camera on by plugging in power from power supply or using PoE
- 3) If successful, the orange network light will illuminate, and the green light will start flashing.
- 4) If unsuccessful, examine if the patch cable is bad or if you have connected to an inactive network jack.

3. Network Connection

Please see examples of the connection method between network camera and computer, as in pictures 1.1 and 1.2, below:

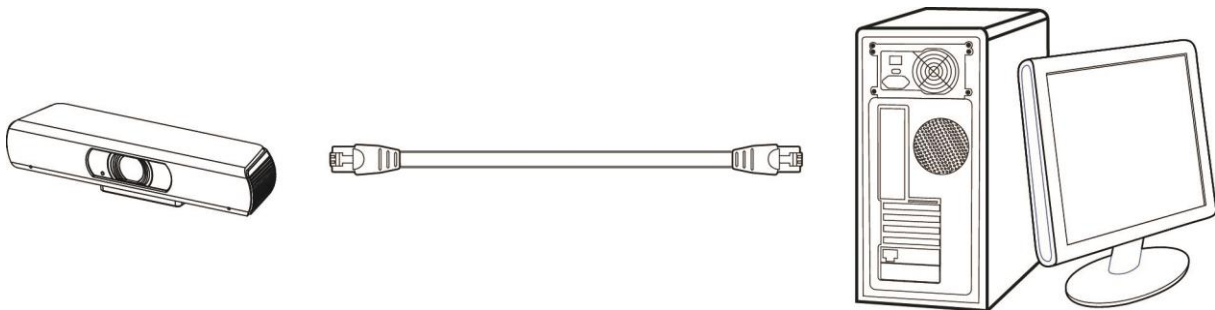

Picture 1.1 Direct connection via a standard “patch cable” / network cable

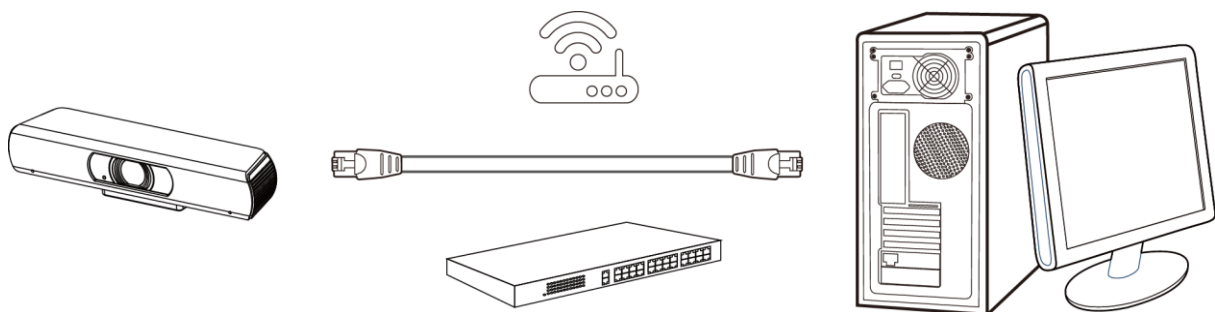


Picture 1.2 Connection to LAN via “Patch cable” / network cable to LAN wall jack or LAN switch



152 Robbins Rd, Downingtown, PA, 19335, USA - HuddleCamHD.com | 1 800 - 486-5276

Setting up the Camera's IP.....

1. The first thing you are going to want to do to get your camera up and streaming on your network is to connect your camera to power, to an active network port on your network. (Note it will power on when power is applied via power supply or PoE)
2. Next, go online and download the IP Address Settings Tool, for Windows & MacOS, from the HuddleCamHD Download Page. Once you complete the installation and launch the tool "UPGRADE vX.X" you should be able to click the "Search" button to locate all the available HuddleCamHD cameras on your network.
 - a. If you are having issues with camera discovery...
 - i. There is likely an issue with mDNS not being enabled / configured properly - *consult your network administrator or network equipment manufacturers manual for proper setup.*
 - ii. The Network Drop Down may be on the wrong network interface
 - iii. You can always revert to the direct PC to Camera connection as shown in the previous section

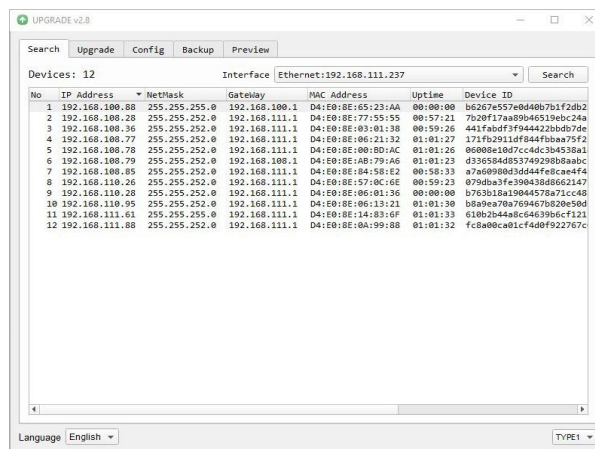

3. The next thing you would want to do is change your camera's IP address to be in the same range as your network. The camera comes with a default static IP address of 192.168.100.99. You will need to update that to be in the same range as your network. If you look at the example above, you can see from the other cameras on the network, that the network is set up to be in the range of 192.168.111.XXX. *Please see the "Extras" section at the end of this document for further information on finding your network IP scheme.*
4. Once you know your IP range you can right click on the camera you wish to change the IP address for and click "Config". *Note: if you need to find the IP range of your network, you can do so by following the guide in the extras section at the end of this document.*



152 Robbins Rd, Downingtown, PA, 19335, USA - HuddleCamHD.com | 1 800 - 486-5276


You should now be able to set your camera's IP address to one in the range of your network. You should be able to leave the subnet mask alone, unless you are configuring the camera for use across subnets.

(Note that in more complex network environments you may have to request a "Static IP" from the Network Administrator(s) to prevent any possible complications on your network in addition request the appropriate Network Mask, Default Gateway and First DNS for use with Static IP)


5. Now that you have set the Static IP address of your HuddleCamHD camera, you should be able to access the WebUI for control and settings via a web browser.
6. Open your desired browser and type in the Static IP address you assigned to your camera, in step 4, you will be prompted for a Username and Password, both are "admin" by default.
7. You may be prompted to download the ActiveX component for live viewing if utilizing Microsoft Internet Explorer (not Edge). *Currently no other browsers are supported.*
8. You should have full P / T / Z control over your camera using the P / T / Z controls on the left side. You can adjust many of your camera's settings via the IP interface and if using Internet Explorer with the ActiveX plugin you will also receive a live preview.



152 Robbins Rd, Downingtown, PA, 19335, USA - HuddleCamHD.com | 1 800 - 486-5276

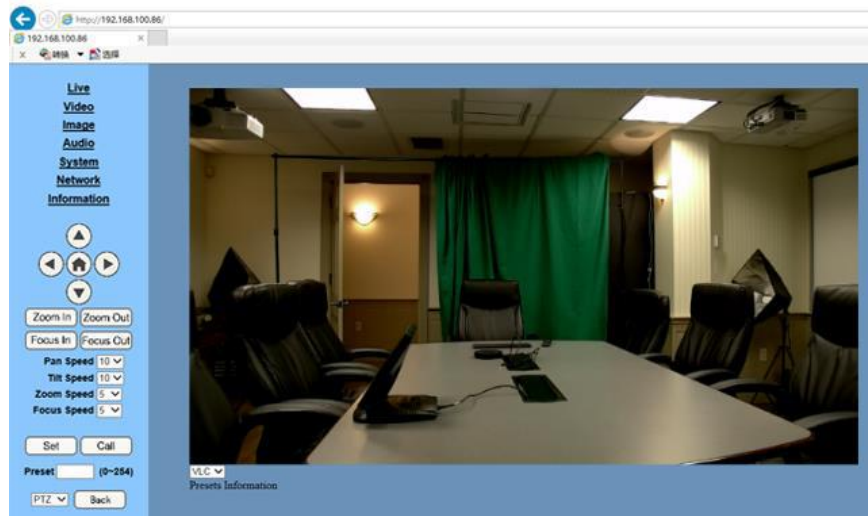

9. You should now be able to pull an RTSP stream from your camera into VLC, WireCast, OBS, etc...
 - a. You can test the RTSP stream in VLC media player.
 - b. Once you install VLC and launch the program you should be able to go to the “Media” drop down meny and then select “Open Network Stream”.
 - c. In the network URL, you should enter “rtsp://<ip-address>:554/1”
 - i. In the example below, for a HuddleCamHD camera with the static IP address of 192.168.111.84, the RTSP stream would be accessed by entering “rtsp://192.168.111.84:554/1”
 - ii. The “554” part is the port number used by the camera, and the “1” is the stream number.
 - iii. There are up to three RTSP network streams available
 1. One for HD content “1”
 2. One for SD content “2”
 3. One for SD content “3”

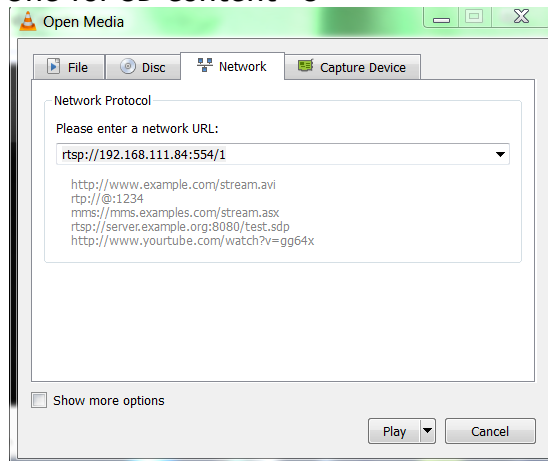



152 Robbins Rd, Downingtown, PA, 19335, USA - HuddleCamHD.com | 1 800 - 486-5276

Extras.....

1. Discovering your Network IP range.
 - a. *Changing your IP address without talking to your network admin could lead to conflicts with your network.*
 - b. *If you change your address to one that is already in use it will cause communications problems.*
2. If you need to discover the IP address range of your network you can do so by using command prompt for Windows or Terminal for Apple computers.
3. To do this on a PC, you would type “CMD” into your search bar in the Windows menu. You should see a black box pop up with the ability to type in the box.
4. If you type “ipconfig” and hit “Enter” on your keyboard you will see a bunch of information pop up in your command prompt.
5. When you see “IPv4 Address” that is your computers IP address on your current network. So you would use the first 3 sets of numbers from this as your IP range.

```
C:\Windows\system32\cmd.exe
C:\Users\ANDY>ipconfig

Windows IP Configuration

Wireless LAN adapter Wireless Network Connection 3:

    Media State . . . . . : Media disconnected
    Connection-specific DNS Suffix  . :

Wireless LAN adapter Wireless Network Connection 2:

    Media State . . . . . : Media disconnected
    Connection-specific DNS Suffix  . :

Wireless LAN adapter Wireless Network Connection:

    Connection-specific DNS Suffix  . :
    Link-local IPv6 Address . . . . . : fe80::9c74:bc95:7829:96c%15
    IPv4 Address. . . . . : 192.168.111.219
    Subnet Mask . . . . . : 255.255.255.0
    Default Gateway . . . . . : 192.168.111.1

Ethernet adapter Bluetooth Network Connection:
```

```
Blackmagic
stephaniepeters ~ -bash — 80x24
Last login: Tue Oct 27 08:24:05 on console
Stephanies-MacBook-Pro:~ stephaniepeters$ ipconfig
usage: ipconfig <command> <args>
where <command> is one of waitall, getifaddr, ifcount, getoption, getpacket, get
v6packet, set, setverbos
Stephanies-MacBook-Pro:~ stephaniepeters$ ipconfig getifaddr en0
192.168.111.112
Stephanies-MacBook-Pro:~ stephaniepeters$
```

6. If you need to find the IP range of your Apple computer, you would first open a new finder window and then go to Applications, and then Utilities. You should see the program “Terminal” in that menu, select that program.
7. Now, you would type in “IP config getifaddr en0”. Once you type this string and click “Enter” on your keyboard you will receive back an IP address.
8. So the IP range of the network, according to the Apple computer is 192.168.111.xxx, you can use this to figure out the IP range in which your camera needs to be set.



152 Robbins Rd, Downingtown, PA, 19335, USA - HuddleCamHD.com | 1 800 - 486-5276

Camera Web Interface.....

1. Homepage introduction

1.1 Home page

- 1) The left pane features PTZ, Preset, Focus, and OSD Control Options
- 2) The right pane features configuration options and a live preview (IE only)

1.2 Menu & Control

Live
Video
Image
Audio
System
Network
Information

▲
◀ ▶
▼

Zoom In Zoom Out

Zoom Speed 7 ▼

Set Call

Preset (0~254)

Menu

Language English ▼

1. **Configuration Options:** Live Preview, Video Parameters, Image Settings, Audio Settings, Network Configuration and Camera Info.
2. **OSD Control:** The MENU button will open / close the OSD. Up, Down, Left and Right arrows allow for navigation and changing options.
3. **Pan / Tilt Control:** The Up, Down, Left and Right arrows allow electronic pan and tilt when EPTZ has been enabled. *(Electronic Pan/Tilt is available once you have electronically zoomed in.)*
4. **Zoom Control:** Zoom in and zoom out buttons allow for adjustment wide or tele when EPTZ is enabled from the OSD.
5. **Speed Control:** Zoom speeds can be set at any rate between 0 - 7.
6. **PTZ Preset:** After manually setting up a shot that you would like to return to later, you can save presets for quick recall of these positions. Type a number between 0 and 254 into the Preset box. Click the “Set” button to save the current location with that preset number. Click the “Call” button to cause the camera to return to that position. This enables smooth, quick and convenient control without the need to manually drive the camera.
7. **Language Selection:** Click either “Russian”, “Chinese” or “English” to change the language of the menu.



152 Robbins Rd, Downingtown, PA, 19335, USA - HuddleCamHD.com | 1 800 - 486-5276

Video.....

Click “Video” - the streaming parameters may now be set in the right-side area.

The camera can send 3 simultaneous streams.

For example, you can send one stream in HD and one in SD so that PCs may have their own stream resolution depending on bandwidth concerns or usage..

Video Settings	Second stream
Video Format: 60Hz ▼	Encode Protocol: H264 ▼
Encode Level: mainprofile ▼	Resolution: 640x360 ▼
EPTZ: On ▼	Bit Rate: 2048 (96~16384) kbps
NDI Preset: Off ▼	Frame Rate: 30 ▼ fps
	I Key Frame Interval: 60 (2~1200)
	Bit Rate Control: ☒ CBR ☐ VBR
	Fluctuate Level: 1 ▼
First stream	Third stream
Encode Protocol: H264 ▼	Encode Protocol: H264 ▼
Resolution: 1920x1080 ▼	Resolution: 3840x2160 ▼
Bit Rate: 12288 (96~16384) kbps	Bit Rate: 16384 (96~16384) kbps
Qfactor: 80 (1~99)	Frame Rate: 30 ▼ fps
Frame Rate: 30 ▼ fps	I Key Frame Interval: 60 (2~1200)
I Key Frame Interval: 60 (2~1200)	Bit Rate Control: ☒ CBR ☐ VBR
Bit Rate Control: ☒ CBR ☐ VBR	Fluctuate Level: 1 ▼
Fluctuate Level: 1 ▼	Apply Cancel

1. Video Settings

Video Format:

Supports 50Hz(PAL) and 60Hz(NTSC) and OSD formats.

Note: 60Hz is often used for North America

Video Coding:

H.264 (High Profile, Main Profile, Base Line)

*Note may override / limit other settings

H.265 (High Profile, Main Profile, Base Line)

*Note may override / limit other settings

MJPEG (Stream 1 only)

*Note may override / limit other settings

EPTZ:

Electronic Pan/Tilt/Zoom. Toggle on & off

Note: When EPTZ is on, high res stream is to stream 3 for NDI® compatibility



152 Robbins Rd, Downingtown, PA, 19335, USA - HuddleCamHD.com | 1 800 - 486-5276

2. Streams (1 - 3)

NDI® Modes:

Users can select from pre-determined high-quality IP stream settings for use with NDI®

“NDI Ultra” will provide a 2160@30 fps NDI® feed

“NDI Medium” will provide a 1080@30 NDI® feed

“NDI Low” will provide a 720@30 NDI® feed

NDI modes set the NDI® preview mode at a 360@30 NDI® feed

Resolution:

The first stream allows for the following output resolutions:

1920x1080, 1280x720, 1024x576, 960x540, 640x480, 640x360 resolutions

The second stream allows for the following output resolutions:

3840x2160@15, 1920x1080, 1280x720, 1024x576, 720x480, 720x408, 640x360, 480x270, 320x240, 320x180 resolutions.

The third stream allows for the following output resolutions:

1024x576, 960x540, 720x480, 720x408, 640x360, 480x270, 320x240, 320x180 resolutions.

Bit Rate:

Users can assign the bit rate of the stream

(Bitrate range is from 32 kbps ~ 102400 kbps noting that bandwidth is shared by all three streams).

Maximum Frame Rate:

Users can specify the maximum frame rate (fps or frames per second).

Higher frame rates provide smoother video but require higher bit rate settings..

Output is limited to a maximum of 30 fps.

I Key Frame Interval:

This setting defines how many predicted frames will be used for each actual frame provided (from 1-1200). Shorter intervals increase video quality at the cost of requiring higher bit rates in order to look good, it is best to consult the recommended settings for your ingestion system.

Bit Rate Control Method:

Constant Bit Rate (CBR): The video encoder will encode at a constant rate as set in bitrate setting.

Variable Bit Rate (VBR): The video encoder will encode at a variable rate, with a maximum as set in the bit rate setting.

VBR should only be used when working against bandwidth constraints.

Fluctuation Level:

This setting affects how aggressive variable bit rate adjustments will be (Fluctuate Range is from 1 ~ 6).

Spikes that are too large may affect video quality.


Low levels will not save on as much bandwidth



152 Robbins Rd, Downingtown, PA, 19335, USA - HuddleCamHD.com | 1 800 - 486-5276

Image.....

Click “Image” - the image parameters may now be set in the right side area.

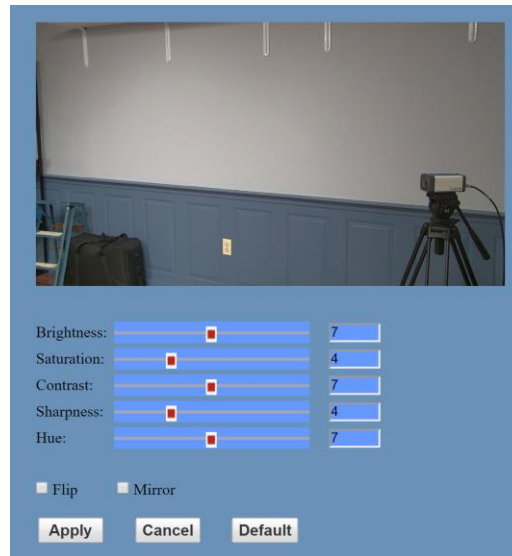

Brightness:

Image brightness can be adjusted from 0-14 using the presented slider control.
The box on the right shows the corresponding numerical value. *(Default is 7)*

Saturation:

Color Saturation can be adjusted from 0-14 using the presented slider control.
The box on the right shows the corresponding numerical value. *(Default is 4)*

Contrast:

Contrast can be adjusted from 0-14 using the presented slider control.
The box on the right shows the corresponding numerical value. *(Default is 10)*

Sharpness:

Sharpness can be adjusted from 0-15 using the presented slider control.
The box on the right shows the corresponding numerical value. *(Default is 3)*

Hue:

Hue can be adjusted from 0-14 using the presented slider control.
The box on the right shows the corresponding numerical value. *(Default is 7)*

Flip & Mirror:

Check the “Flip” box to invert the image vertically for a ceiling mount.
Check the “Mirror” box to reverse the image horizontally. *(Default is unchecked)*

Apply, Cancel and Default Buttons:

After adjusting the parameters, press the “Apply” button to save settings.
Press the “Cancel” button to cancel any adjustment of the parameters.
Press the “Default” button to return to the default values.



152 Robbins Rd, Downingtown, PA, 19335, USA - HuddleCamHD.com | 1 800 - 486-5276

Audio.....

Click “**Audio**” - the audio parameters may now be set in the right side area.

Audio Settings

Audio Switch: On ▼

Audio Type: AAC ▼

Sample Rate: 16K ▼

Bit Rate: 96K ▼

noise_cancel_level: 1 ▼

Input Type: MIC ▼

Input Vol L : 8 (0~30) db

Input Vol R : 8 (0~30) db

ADTS Options: Off ▼

Apply Cancel

Audio Switch:

Enable or Disable audio embedding

Audio Encoding:

AAC

Audio Sample Rate Options:

16K, 44.1K, or 48K

Audio Bit Rate Options:

96K, 128K, or 256K

Noise_Cancel_Level:

0, 1, 2, or 3

Input Type / Parameters:

MIC

Input Vol L Settings:

Adjusts the volume of the left audio channel (-97 to +30dB)

Input Vol R Settings:

Adjusts the volume of the right audio channel (-97 to +30dB)

ADTS Options:

Audio Data Transport Stream - Can be set to ‘On’ or ‘Off’ (Use with MJPEG only)

Apply and Cancel Buttons:

After modifying the parameters, press the “**Apply**” button to save.

Press the “**Cancel**” button to discard any changes not applied yet.



152 Robbins Rd, Downingtown, PA, 19335, USA - HuddleCamHD.com | 1 800 - 486-5276

[System.....](#)

Click “**System**” - the system parameters may now be set in the right side area.

Initialize
Work Mode: RTSP ▼
Reboot: Reboot

User
UserName: admin
Passwd:
Guest: guest
Passwd:
Apply Cancel

1. Initialize

Work Mode:

Legacy feature to support Third-Party solutions and has no standard use.

Reboot Button:

The “**Reboot**” button will initiate a system restart. This is required after changing most settings.

2. User

User and Password:

Users can modify the Admin / Guest passwords (letters and numbers only).

The default credentials are:

User: **admin** and Password: **admin**

User: **guest** and Password: **guest**

Apply and Cancel Buttons:

After modifying the parameters, press the “**Apply**” button to save.

Press the “**Cancel**” button to leave settings unchanged.



152 Robbins Rd, Downingtown, PA, 19335, USA - HuddleCamHD.com | 1 800 - 486-5276

Network.....

Click “**Network**” - the network parameters may now be set in the right side area.

Lan Settings
IP Configuration Type: Fixed IP Address
IP Address: 192.168.111.37
Subnet Mask: 255.255.252.0
Gateway: 192.168.111.1
DNS Address: 192.168.111.1
MAC Address: D4 : E0 : 8E : AE : 58 : 1F

ApplyCancel

Port Settings
HTTP Port number: 80 (80)
RTSP Port: 554 (554)
PTZ Port: 5678 (5678)
UDP Port: 1259 (1259)

Control Protocol Settings
Pelco-D Address: 0 (0~254)
Pelco-P Address: 0 (0~31)

RTMP Settings
First stream: On Off Video Audio
MRL: rtmp://192.168.100.138/live/stream0
Second stream: On Off Video Audio
MRL: rtmp://192.168.100.138/live/stream1
Third stream: On Off Video Audio
MRL: rtmp://192.168.100.138/live/stream2

RTSP Settings
RTSP Auth: On Off

ONVIFSettings
ONVIF: On Off
ONVIF Auth: On Off

Multicast Settings
Multicast: On Off
Address: 234.1.2.99
Port: 6688

SDK Settings
Active Connection: On Off
Address: 192.168.100.138
Port: 1234

NTP Settings
NTP time zone: (GMT-05:00) Eastern Time (US & Canada)
NTP time sync: On Off
Server address: cn.ntp.org.cn
Time interval: 1440 minutes
Main time show: On Off
Position: X 0 Y 0 (0~100)
Sub time show: On Off
Position: X 0 Y 0 (0~100)

ApplyCancel



152 Robbins Rd, Downingtown, PA, 19335, USA - HuddleCamHD.com | 1 800 - 486-5276

1. LAN Settings:

IP settings for the device can be set here for either Static (fixed) or DHCP (dynamic) addressing.

The default IP address of the camera is 192.168.100.99.

Please note that after changing the IP settings for the camera, you may not be able to reconnect until your PC is set for and connected to the same subnet or visible via proper network routing.

2. Port Settings:

While the IP address identified the device, the camera uses multiple ports for communication that can be adjusted if necessary.

HTTP Port: This is the port for web applications using the default port of 80.

RTSP Port: The camera supports the RTSP streaming protocol using the default port of 554.

PTZ Port: Supports camera control via the TCP protocol using the default port of 5678

UDP Port: Supports camera control via the UDP protocol using the default port of 1259

3. Control Protocol Settings:

Control IDs / addresses for Pelco-D (0-255) and Pelco-P (0-31) may be set here.

4. RTMP Settings:

The camera provides for up-to three (3) RTMP streams to an RTMP server or servers providing an appropriate RTMP string to use with the camera's encoder.

Set 1st, 2nd, and/or 3rd stream to 'On' or 'Off' as desired.

Check to include video and/or audio as desired.

Enter the address provided from / for the RTMP server in the MRL location

Note: an RTMP streaming server is required for use of RTMP streaming feature.

5. RTSP Authorization:

Enable or disable authorization for accessing the RTSP output stream(s)

6. ONVIF Settings:

Turn ONVIF compatibility 'On' / 'Off' (for ONVIF compatible streaming and control).

Turn ONVIF authorization 'On' / 'Off' (username and password for connection).

7. Multicast Settings: (Only use if your network has been configured to support multicast)

Turn Multicast streaming 'On' or 'Off' (*reboot required to commit*)

Address and Port Settings: Enter the desired multicast address and port to be used by the camera on the multicast capable network.

Note: Do not attempt to use Multicast streaming unless your network has been setup and tested to support multicast e.g. IGMPv3, significant network performance issues or outages may result otherwise. The public internet does not support multicast streaming.

8. SDK Settings: (Only enable if you are developing using the SDK)

Address and Port Settings: Enter the desired SDK address and port to be used by the camera for use with development of software under the SDK.



152 Robbins Rd, Downingtown, PA, 19335, USA - HuddleCamHD.com | 1 800 - 486-5276

9. NTP Settings:

Network Time Protocol: Enable to synchronize clock between camera & a time server

10. Apply and Cancel Buttons

After modifying the parameters, press the “**Apply**” button to save.

Press the “**Cancel**” button to leave settings unchanged.

[Information.....](#)

Click “**Information**” - shows the current device information, as shown below.

You may change the Device ID as required for your application.

(This is utilized by NDI® Software when identifying your camera on the network.)

Information	
Device ID:	HuddleCamHD Camera
Software Version:	SOC v8.1.65
Device Type:	O19.HI
Webware Version:	v1.5.4
Serial No.:	v2d10110012
Apply Cancel	



152 Robbins Rd, Downingtown, PA, 19335, USA - HuddleCamHD.com | 1 800 - 486-5276

Network Camera Control Protocol.....

Setup camera for IP (First see “Setting up the Camera’s IP” section above)

Control Notes for PTZ Control

The camera currently supports various PTZ control methods including:
The web interface, HTTP-CGI and TCP/UDP protocols

The camera includes an internal TCP server with the default port number of 5678.

When the client and server set up a TCP connection, the client sends commands to the internal server and the server will then parse and execute the PTZ commands.

The camera includes an internal UDP server with the default port number of 1259.

When the client and server set up a UDP connection, the client sends commands to the internal server and the server will then parse and execute the PTZ commands.

The HuddleCamHD command format based on VISCA / VISCA over IP can be found online at HuddleCamHD.com/Resources

HTTP CGI Control: The camera’s integrated web server supports HTTP-CGI for control.
Please see command list below for reference.

Control	Function	Command	Variable	Values	Comments
Pan & Tilt		http://[camera ip]/cgi-bin/ptzctrl.cgi?ptzcmd&[action]&[pan speed]&[tilt speed]	[camera ip]	*Camera’s current IP	
			[action]	up	moves camera ‘up’
				down	moves camera ‘down’
				left	moves camera ‘left’
				right	moves camera ‘right’
				leftup	moves camera ‘left’ & ‘up’
				rightup	moves camera ‘right’ & ‘up’
				leftdown	moves camera ‘left’ & ‘down’
				rightdown	moves camera ‘right’ & ‘down’
				ptzstop	tells camera to ‘stop’ moving
			[pan speed]	1	slowest ‘pan’ speed
				...	ranges from 1 - 24
				24	fastest ‘pan’ speed
Zoom		http://[camera ip]/cgi-bin/ptzctrl.cgi?ptzcmd&[action]&[zoom speed]	[camera ip]	*camera’s current IP	
			[action]	zoomin	zooms camera in



HuddleCamHD

152 Robbins Rd, Downingtown, PA, 19335, USA - HuddleCamHD.com | 1 800 - 486-5276

			zoomout	zooms camera out
			zoomstop	stops zooming
		[zoom speed]	1	slowest 'zoom' speed
			...	ranges from 1 - 7
			7	fastest 'zoom' speed
Focus	http://[camera ip]/cgi-bin/ptzctrl.cgi?ptzcmd&[action]&[focus speed]	[camera ip]	*camera's current IP	
		[action]	focusin	focuses camera in
			focusout	focuses camera out
			focusstop	stops focusing
		[focus speed]	1	slowest 'focus' speed
			...	ranges from 1 - 7
			7	fastest 'focus' speed
Focus Lock	http://[camera ip]/cgi-bin/param.cgi?ptzcmd&[action]_mfocus	[camera ip]	*camera's current IP	
		[action]	lock	locks focus state
			unlock	unlocks focus state
Home Position	http://[camera ip]/cgi-bin/ptzctrl.cgi?ptzcmd&home	[camera ip]	*cameras current IP	
Preset	http://[camera ip]/cgi-bin/ptzctrl.cgi?ptzcmd&[action]&[position number]	[camera ip]	*cameras current IP	
		[action]	posset	position 'set'
			poscall	position 'call'
		[position number]	0	beginning of range 1
			...	range 1 from 0-89
			89	end of range 1
			100	beginning of range 2
			...	range 2 from 100-254
			254	end of range 2
Direct Position Recall	http://[camera ip]/cgi-bin/ptzctrl.cgi?ptzcmd&[mode]&[pan speed]&[tilt speed]&[pan position]&[tilt position]	[camera ip]	*cameras current IP	
		[mode]	abs	absolute positioning
			rel	relative positioning
		[pan speed]	1	slowest 'pan' speed
			...	ranges from 1 - 24
			24	fastest 'pan' speed
		[tilt speed]	1	slowest 'tilt' speed
			...	ranges from 1 - 20
			20	fastest 'tilt' speed
		[pan position]	0000 or FFFF	home position
			0001	first step 'pan' right
			...	range from 0000 - 0990 (HEX)
			0990	last step 'pan' right
			FFFE	first step 'pan' left
			...	range from FFFF - F670 (HEX)
			F670	last step 'pan' left
		[tilt position]	0000 or FFFF	home position
			0001	first step 'tilt' up
			...	Range from 0001 - 0510 (HEX)
			0510	last step 'tilt' down
			FFFE	first step tilt down
			...	range from FFFF - FE51 (HEX)
			FE51	last step tilt down
Direct Zoom Recall	http://[camera ip]/cgi-bin/ptzctrl.cgi?ptzcmd&zoomto&[zoom speed]&[zoom position]	[camera ip]	*cameras current IP	
		[zoom speed]	0	slowest 'zoom' speed
			...	range from 0 - 7
			7	fastest zoom speed
		[zoom position]	0000	full wide
			...	range from 0000 - 4000 (HEX)
			4000	full tele



152 Robbins Rd, Downingtown, PA, 19335, USA - HuddleCamHD.com | 1 800 - 486-5276

Navigation				
Function	Command	Variable	Values	Comments
OSD Access	http://[camera ip]/cgi-bin/param.cgi?navigate_mode&[mode]	[camera ip]	*cameras current IP	
		[mode]	OSD	calls OSD Menu
			PTZ	P/T/Z Control Mode
OSD Menu Navigation	http://[camera ip]/cgi-bin/ptzctrl.cgi?ptzcmd&[action]	[camera ip]	*cameras current IP	
		[action]	up	moves menu 'up'
			down	moves menu 'down'
			enter	selects an OSD option
			return	returns to previous menu
Image Adjustments				
Function	Command	Variable	Values	Comments
Image Settings	http://[camera ip]/cgi-bin/param.cgi?post_image_value&[mode]&[level]	[camera ip]	*cameras current IP	
		[mode]	bright	adjust brightness
			saturation	adjust saturation
			contrast	adjust contrast
			sharpness	adjust sharpness
			hue	adjust hue
		[level]	0	beginning of range
			...	ranges from 0 - 14
			14	end of range
Image Orientation	http://[camera ip]/cgi-bin/param.cgi?post_image_value&[mode]&[state]	[camera ip]	*cameras current IP	
		[mode]	Flip	flipped image adjustments
			Mirror	mirror image adjustments
		[state]	1	flip / mirror
			0	default
Default Image Settings	http://[camera ip]/cgi-bin/param.cgi?get_image_default_conf	[camera ip]	*cameras current IP	defaults all image settings above
JPEG Snapshot				
Function	Command	Variable	Values	Comments
Take Snapshot	http://[camera ip]/snapshot.jpg	[camera ip]	*cameras current IP	
Change Resolution	http://[camera ip]/cgi-bin/snapshot.cgi?post_snapshot_conf&resolution=[size]	[camera ip]	*cameras current IP	
		[size]	1920x1080	Sets JPEG resolution to 1920x1080
			960x600	Sets JPEG resolution to 960x600
			480x300	Sets JPEG resolution to 480x300
Photobooth Pictures				
Function	Command	Variable	Values	Comments
Take Snapshot	http://[camera ip]/cgi-bin/booth.cgi?0&4&[delay]&photo&0	[camera ip]	*cameras current IP	
		[delay]	1	shortest delay
			...	delay in seconds 1 - 9
			9	longest delay
Get Snapshot	http://[camera ip]/photo[num].jpg	[num]	1	photo 1
			...	photos 1 - 4
			4	photo 4



152 Robbins Rd, Downingtown, PA, 19335, USA - HuddleCamHD.com | 1 800 - 486-5276

Photobooth Videos				
Function	Command	Variable	Values	Comments
Take Video	http://[camera ip]/cgi-bin/booth.cgi?0&4&[delay]&video&[length]	[camera ip]	*cameras current IP	
		[delay]	1	shortest delay
			...	delay in seconds 1 - 9
Get Video	http://[camera ip]/video[num].jpg	[num]	9	longest delay
			1	video 1
			...	videos 1 - 4
Inquiries			4	video 4
Function	Command	Variables	Values	Comments
Video	http://[camera ip]/cgi-bin/param.cgi?get_media_video	[camera ip]	*cameras current IP	Network video configuration
Audio	http://[camera ip]/cgi-bin/param.cgi?get_media_audio	[camera ip]		Network audio configuration
Network	http://[camera ip]/cgi-bin/param.cgi?get_network_conf	[camera ip]		Network configuration
Information	http://[camera ip]/cgi-bin/param.cgi?get_device_conf	[camera ip]		Camera information
Serial Number	http://[camera ip]/cgi-bin/param.cgi?get_serial_number	[camera ip]		Serial number *Not always accurate



152 Robbins Rd, Downingtown, PA, 19335, USA - HuddleCamHD.com | 1 800 - 486-5276

Photobooth Functionality.....

Your HuddleCamHD camera has the ability to quickly, and easily, take a series of four (4) still images or video files that are stored on the camera and made accessible with a standard web browser on the same network. We'll cover how to use this new feature to take still images, videos and how to retrieve them.

Photos.....

You have two (2) options to initiate a series of four (4) still images being captured...

You can enter the following HTTP string into any web browser on the same network as the camera to initiate a series of four (4) still images.

Take Still Images: `http://<camera ip>/cgi-bin/booth.cgi?0&4<delay>&photo&0`

In this example the variable "delay" is utilized to add additional delay, in seconds, between still images being taken. The variable "delay" can have any value from 1 - 9, with the values representing time in seconds

You can also press the "F1" button on your IR remote to initiate a "quick capture" that has, approximately, a four (4) second delay between four (4) still images being captured.

To retrieve your series of four (4) still images you will need to open a standard web browser with network access to the camera and use the following HTTP strings to retrieve the still image files as desired.

Still Image 1: `http://<camera ip>/photo1.jpg`

Still Image 2: `http://<camera ip>/photo2.jpg`

Still Image 3: `http://<camera ip>/photo3.jpg`

Still image 4: `http://<camera ip>/photo4.jpg`

Videos.....

You have two (2) options to initiate a series of four (4) videos being captured...

You can enter the following HTTP string into any web browser on the same network as the camera to initiate a series of four (4) video recordings.

Take Video: `http://<camera ip>/cgi-bin/booth.cgi?0&4<delay>&video&<length>`

In this example the variable "delay" is utilized to add additional delay, in seconds, between videos being taken. The variable "delay" can have any value from 1 - 9 with the values representing time in seconds.

In this example the variable "length" is utilized to adjust the overall length, in seconds, of each video file. The variable "length" can have any value from 1 - 10 with the values representing time in seconds.



152 Robbins Rd, Downingtown, PA, 19335, USA - HuddleCamHD.com | 1 800 - 486-5276

You can also press the “F2” button on your IR remote to initiate a “quick capture” that has, approximately, a four (4) second delay between four (4) ten (10) second videos being captured.

To retrieve your series of four (4) videos you will need to open a standard web browser with network access to the camera and use the following HTTP strings to retrieve the video files as desired.

Video 1: <http://<camera ip>/video1.mp4>

Video 2: <http://<camera ip>/video2.mp4>

Video 3: <http://<camera ip>/video3.mp4>

Video 4: <http://<camera ip>/video4.mp4>

Video Note: It can take the camera time for the video files to be fully captured and processed; if they are not retrievable please wait an additional 30 - 60 seconds for the process to complete



152 Robbins Rd, Downingtown, PA, 19335, USA - HuddleCamHD.com | 1 800 - 486-5276

Troubleshooting.....

Problem	Cause	Resolution
There is no power to the camera.	Power adapter is disconnected from outlet or from camera.	Check the connections between the camera, power adapter and outlet. If anything is disconnected, reconnect it.
	There is no PoE power being supplied.	Use the included power supply.
Camera is unable to electronically pan, tilt, and/or zoom.	No electronic zoom has been performed	Zoom first then try panning or tilting.
	Pan, tilt or zoom range limit was reached.	Try to pan/tilt/zoom in the other direction.
IR Remote control not working.	The “camera select” button on the remote control is not set to match the “IR select” switch number set on the camera.	Choose the correct “IR select” number to match camera settings.
IP control not working	Commands being sent are incorrect or to wrong IP / port	Refer to VISCA manual and network setup.
The Camera is not working at all.	No response or image from camera.	Disconnect power, and wait a few minutes, then connect the power again. Retry.



152 Robbins Rd, Downingtown, PA, 19335, USA - HuddleCamHD.com | 1 800 - 486-5276

Specs.....

Model Number: HC-EPTZ-NDI

Camera & Lens

- Video CMOS Sensor 1/2.5" CMOS 8.51M Mega Pixel
- Resolution 3840x2160, 1920x1080, 1280x720, 1024x576, 960x540, 640x480, 640x360
- Frame Rate 50Hz: 1 ~ 25 fps, 60Hz: 1 ~ 30 fps
- Zoom Up to 8X Digital Zoom
- Focal Length f=2.8mm
- Field of View 108°
- Min Lux 0.05 Lux (@ F1.8, AGC ON)
- Warranty 5 years parts and labor

Rear Board Connectors

- Video Interface NDI®|HX / RJ45
- Power Supply Interface 12VDC 1A

Electrical Index

- PoE Requirements: 802.3af
- Power Supply Adapter 12V DC 1A
- Input Voltage 12V DC (10.5-14V DC)
- Input Power 24W (Max)
- Working Environment Indoor

Physical

- Material Aluminum, Plastic
- Dimensions 7.63"W x 2.36"H x 3.66"D (without mount)
(194mm x 60mm x 93mm)
- Weight 0.7 lbs (0.34 kg)
- Box Dimensions 9.375" x 4.3125" x 4.625" (238mm x 109.5mm x 117.5mm)
- Boxed Weight 2.4 lbs (1.1 kg)
- Color Black
- Operating Temperature 32°F to +113°F (0°C to +45°C)
- Storage Temperature -14°F to 140°F (-10°C +60°C)
- Working Environment Indoor only