

HCM-1

Camera Wall Mount - Small Base Set Up Guide



What's Included

- 1) Qty 1 - Small Wall Mount
- 2) Qty 1 - 1/4 20 x 3/8"
- 3) Qty 2 - 1/4" washer
- 4) Qty 4 - #10 x 1 1/4" screws
- 5) Qty 4 - #10-12 x 1" conical plastic anchors
- 6) Qty 4 - #6-32 x 1" screws
- 7) Qty 4 - #6 washers





152 Robbins Rd, Downingtown, PA, 19335, USA - HuddleCamHD.com | 1 800 - 486-5276

STEP 1.

For masonry or drywall wall:

Position on wall and mark wall for anchor placement. Pre-drill 1/4" holes, minimum 1" deep.

For double gang electrical box:

Position over box with slots overlaying device mounting holes in box.

STEP 2.

For masonry or drywall wall:

Place included anchors in wall and mount to anchors using included #10 screws.

For double gang electrical box:


Mount to box using #6 screws and washers provided.

STEP 3.

Drill hole in wall through rear exit opening for cable access, or use base exit opening.

STEP 4.

Mount camera to mount with included 1/4-20 screw. Utilize (0, 1 or 2) 1/4" washers as required, depending upon depth of threaded insert in base of the camera, in order to achieve a snug fit. Connect all cables.

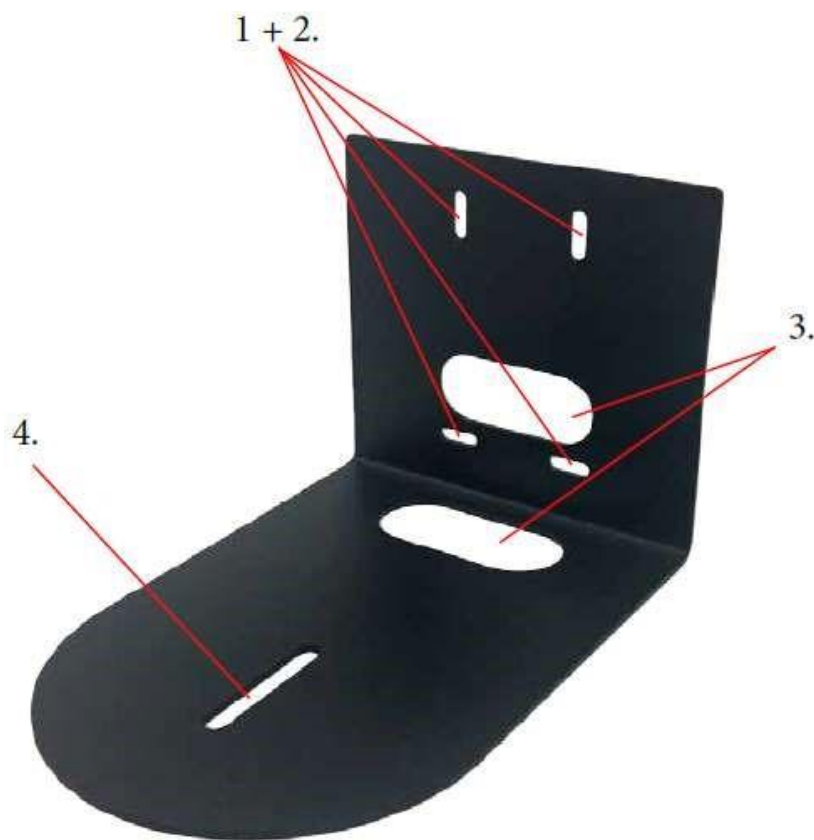

Mount Compatibility:

- HC-GO
- HC3X-xx-G2
- HC3XA-xx
- HC3XW-xx-G2
- HC10X-USB2-xx
- HC10XA-xx
- HC10X-xx-G3
- HC20X-xx-G2
- HC30X-xx-G2
- All PTZOptics cameras
- Most small based SONY, Panasonic, Cisco, Polycom, Vaddio, etc. cameras with a 1/4-20 mounting hole.

*xx = camera color