

HCM-2

Set up Guide



HCM-2

Set-Up Instructions

STEP 1.

Position on wall and pre-drill 1/4" holes

STEP 2.


Place included anchors in wall and screw in mount with included screws*

STEP 3.

Drill hole in wall for cables, or use base hole

STEP 4.

Mount camera to mount with included 1/4 20 screw

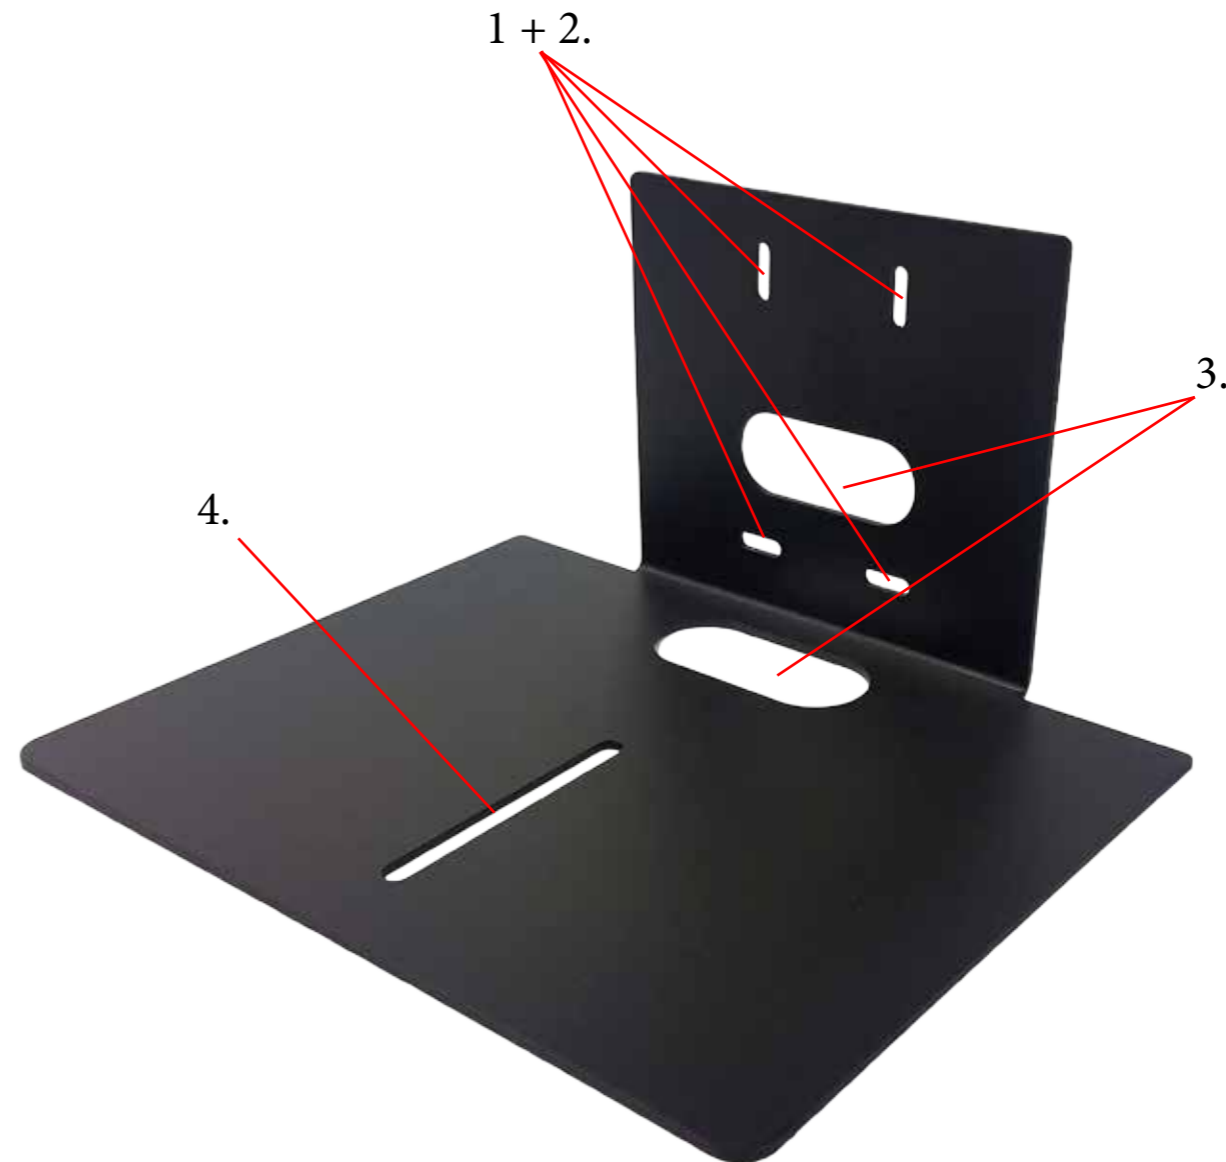

*Can also be mounted to 2-Gang electric box

HCM-2

What's included

- 1- 1/4 20 x 3/8"
 - 2- 1/4" washer
 - 4- #8 x 1 1/4" screws
 - 4- 10-12 x 1" conical plastic anchors
 - 4- 6-32 x 1" screws
 - 4- #6 washers
- All coated in Black Oxide
-
- 1- HuddleCamHD Large Wall Mount
Black powder coated

